

Dramatically improves
the appearance of
window & door
openings

 **ROYAL**
Double Snap[®] Trim

**Stand Alone
Trim System**

for houses & commercial properties with any type of cladding (Siding, Brick, Stone, Metal...)

transform your
windows from
this



...to this!



without aluminum trim coil wrap!






Double Snap[®] Trim



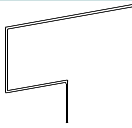
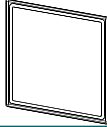
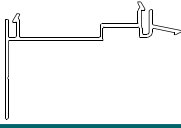
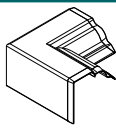
Double Snap[®] Vinyl Trim Systems can be used for a wide variety of applications including window and door casings on residential and commercial properties.

- Double Snap[®] Trim eliminates the need to field fabricate aluminum trim coil shapes
- The unique double-snap design is attached to the wall by means of two locking sides such that no nails, screws or other fasteners are visible
- Installation is quick and easy, saving time for the contractor
- The long-lasting vinyl material eliminates annual maintenance and means no rusting aluminum or flaking/peeling wood to paint
- The Standard Colonial Trim System is used on houses with siding
- The Universal Stand Alone Trim System is used on houses and commercial properties with any type of cladding (Siding, Brick, Stone, Metal...)
- Applications for repair/remodel (retrofit) or new construction jobs

Stand Alone Trim System

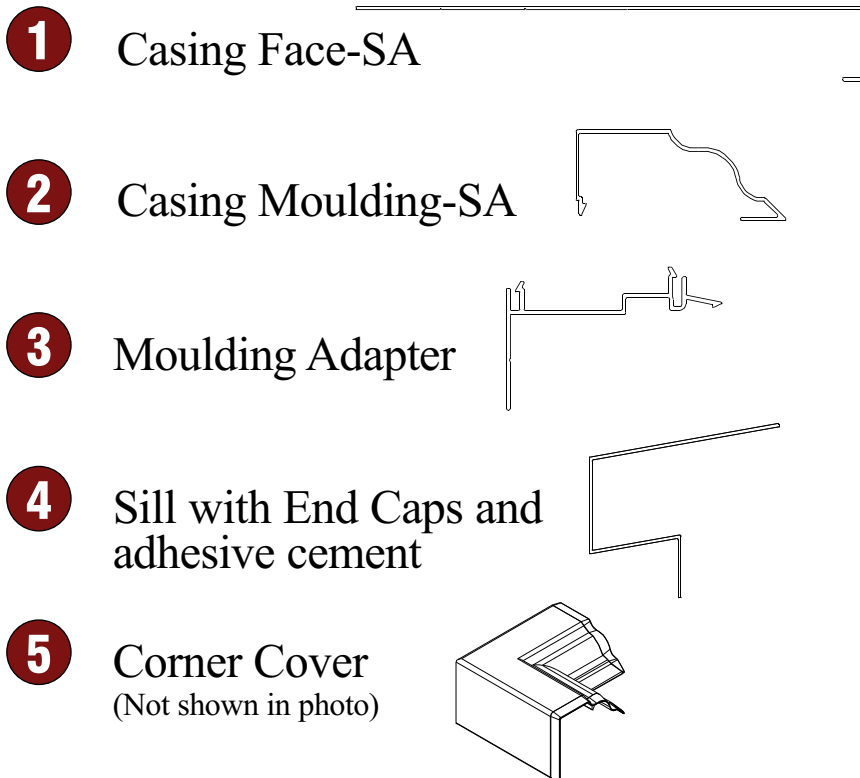


Stand Alone Trim System

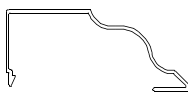Profile Description	SKU No.	Packaging
Stand Alone Casing Moulding 	Q0085 *****-192-MB	MB = 35 pieces X 192" = 560 FT
Stand Alone Casing Face 	Q0086 *****-192-MB	MB = 25 pieces X 192" = 400 FT
Window Sill 	Q0082 *****-192-NB	NB = 14 pieces X 192" = 224 FT
Sill End Caps 	51-01-RH- #	NW = 10 bags X 10 = 100 PCS
Stand Alone Moulding Adapter 	Q0132 *****-192-MB	MB = 30 pieces X 192" = 480 FT
Stand Alone Corner Cover 	CRN- # (if Corner Covers are not desired, coping cuts can be made per You-Tube Video on our website)	NW = 1 bag X 40 = 40 PCS

***** = WH137 (white) or TN319 (tan)

= NW (white) or TN (tan)

3 easy pieces plus sill kit

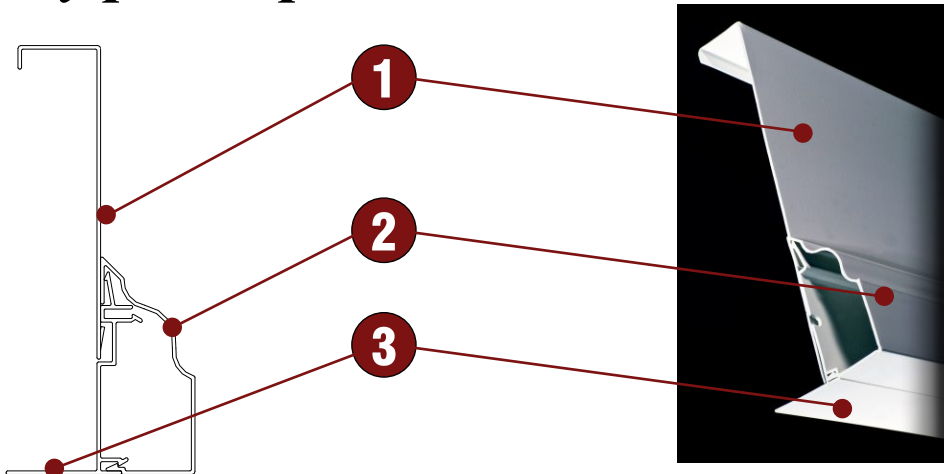

Also available as a Colonial Trim System

Installation Summary

for detailed installation instructions go to
www.doublesnaptrim.com

Prepare Openings

Clean loose or excess caulking. Remove nails and make the surfaces around the opening as smooth as possible. Sawzall a receiver slot at base of side trim to accept notched sill.



Install the vinyl Sill and End Caps

(Doors do not require bottom sill work)



Install Casing Face-Stand Alone pieces

(Two sides and top)



Measure Stand Alone Moulding Adapters and install. Then measure and snap Stand Alone Casing Mouldings into Moulding Adapters.



**Snap corners in place.
That's it - Easy and fast!**



 **ROYAL**
Building Products

Window Systems

Patio Doors

Trim Packages

Color Solutions

71 Royal Group Crescent, Woodbridge, ON L4H 1X9
1.866.852.2791 • www.royalbuildingproducts.com • rwdp@royalbuildingproducts.com